

Package Contents

- CK550 Gaming Keyboard
- Quick Start Guide



= FN

EN



FN + ESC = Default Profile



FN + E = Reset all to default
FN + R = Reset Profile to Default



FN + F1 = Quick Pick/Cycle 9 Colors and Modes
FN + F2 = Red Color Levels (0-9)
FN + F3 = Green Color Levels (0-9)
FN + F4 = Blue Color Levels (0-9)



FN + F5 = Cycle LED Lighting Mode
FN + F6 = Lighting Foreground effect
FN + F7 = Lighting Background effect
FN + F8 = Lighting Demo Mode



FN + F9 = Windows Lock / Full keyboard lock
FN + F10 = Record LED Backlight
FN + F11 = Record Macro
FN + F12 = Delete Macro



FN + PRT SC = Single Loop Macro
FN + SCR LK = Infinite Macro Loop
FN + PAUSE = Repeat Macro



 
FN + 1 = Profile 1
FN + 2 = Profile 2
FN + 3 = Profile 3
FN + 4 = Profile 4



FN + Page Up = Volume Up
FN + Page Down = Volume Down




FN + INS = Play / Pause
FN + HOME = Next Track
FN + DEL = Stop
FN + END = Previous Track



FN + Up / Down Arrow keys:
Speed up / Slow Down LED Lighting Effect

FN + Left / Right Arrow Keys:
Switch Lighting Effect Direction

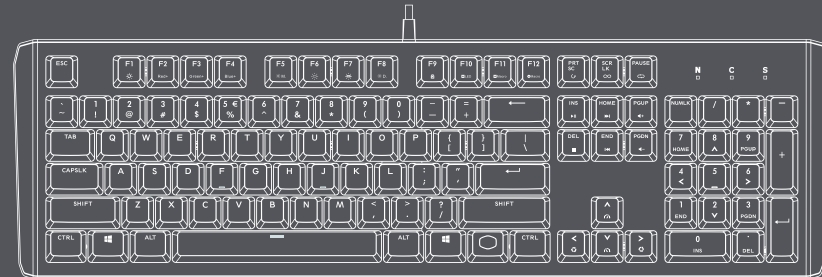

Cooler Master Products

LIMITED WARRANTY

This document describes the warranty terms for all Cooler Master peripheral products

WHO THE WARRANTY PROTECTS:

This Warranty is valid to the original purchaser only.

WHAT THE WARRANTY PROTECTS:

This warranty is valid only for the Cooler Master Products distributed by authorized dealer(s).

Please contact Cooler Master for warranty information, services and questions:

<http://account.coolermaster.com>

WHAT IS AND IS NOT COVERED

It is important to note that our warranty is not an unconditional guarantee for the duration of the Program. Any replaced parts become the property of Cooler Master. The Program does not apply to the software component of a product or a product which has been damaged due to accident, misuse, abuse, improper installation, usage not in accordance with product specifications and instructions, natural or personal disaster, or unauthorized alterations, repairs or modifications.

The Program does also not cover any events such as below:

- Any damages unrelated to manufacturing defects.
- Any unsuitable environment or use of the product in Cooler Master Opinion.
- Any product which has been modified without official permission from Cooler Master, or on which the serial number or warranty sticker has been defaced, modified, or removed.

Damage, deterioration or malfunction resulting from:

- Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification or failure to follow instructions included with the product.
- Third party products using Cooler Master Components will not be covered by warranty. See your vendor or the manufacturer for information about servicing.
- Repair or attempted repair by anyone not authorized by Cooler Master, Inc.
- Any shipment damages (claims must be made with the carrier).
- Unauthorized repairs to a Cooler Master product will void the warranty offered by the Program.

Cooler Master reserves the right to refuse to service any product which has been altered, modified or repaired by non-Cooler Master Service personnel.

• Cooler Master does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.

• Removal or installation charges.

• You are responsible for the cost of shipping the product to Cooler Master. Cooler Master pays the cost of returning a product to You (applies only if product is directly purchased from Cooler Master).

• Cooler Master reserves the right to replace the product with a service product at their sole discretion at any time.

• Product malfunction or damage resulting from liquids or moisture.

• All accessories that malfunction due to physical damage such as: USB cables, extension cables, adapter cables, adapters, power cords, screws, retention brackets, ear cups, and all other similar accessories.

LIMITATION OF IMPLIED WARRANTIES:

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

For the most updated information please visit our official website: www.coolermaster.com
Cooler Master Support: <https://account.coolermaster.com>

EXCLUSION OF DAMAGES

COOLER MASTER'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. COOLER MASTER SHALL NOT BE LIABLE FOR:

- DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECT IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE
- ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY

WARRANTY INFORMATION:

If the product is found with reasonable defect within the period of (refer to Table A.) starting on the first day of purchase (with proof of invoice), this is what you must do, to claim warranty.

PROCEDURES:

1. Consumers should return to the shop where he/she has bought the goods. After confirming with the shop with a valid invoice, they may approach the distributor for RMA claim.
2. After confirmed by the distributor that the goods was damaged due to natural causes, replacement and repair will be done by distributor (including brand new or refurbished goods)
3. All faulty goods must return to the distributor, expenses for returning the faulty goods will be covered by the consumer, and distributor will cover the cost involved in the transporting of parts or repaired goods to the consumer.

Regarding all the expenses incurred in making the claim, and this is how you would claim:

1. Within the valid warranty date, starting from the first day of issuing invoice, Retail shops will assist in confirmation with distributor for the consumer for the following.

A. If the damage was caused by the consumer, then the consumer should cover all expenses in fixing the product, if the product still can't be fixed, we would suggest consumer in buying a brand new product.

B. Product defect caused under natural use, expenses will be covered by the distributor.

2. Faulty products with expired warranty dates, we would suggest consumer to purchase a new products, without undergoing for repairs.

Table A:

Cooler Master Products

Please check your user manual for the exact warranty period terms for products that are not shown below.

For more warranty information, please visit our official website:

<http://www.coolermaster.com/service/warranty.html>

Cooler Master Gaming Peripherals products warranty

| Product Name | Warranty Term |
|--------------|---------------|
| CK550 | 2 years |

FOR AUSTRALIA ONLY:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. (Cooler Master Technology Inc., 8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23586, Taiwan (R.O.C.))
Telephone: +886-2-2225-3517 (standard international call charges apply.)



Make It Yours.



CK550

Full RGB Mechanical Gaming Keyboard

MAKE YOUR GAMING EXPERIENCE.

ES

FN + ESC = Perfil predeterminado

FN + E = Restablecer todo a los valores predeterminados
FN + R = Restablecer Perfil a los valores predeterminados

FN + F1 = Selección rápida / ciclo 9 colores y modos
FN + F2 (Red +) = Niveles Color Rojo (0-9)
FN + F3 (Green +) = Niveles Color Verde (0-9)
FN + F4 (Blue +) = Niveles Color Azul (0-9)

FN + F5 = Modo Iluminación LED
FN + F6 = Efecto frontal de Iluminación
FN + F7 = Efecto trasero de Iluminación
FN + F8 = Modo de demostración de Iluminación

FN + F9 = Bloqueo de Windows / Bloqueo total del teclado
FN + F10 = Grabación Retroiluminación LED
FN + F11 = Grabar Macro
FN + F12 = Borrar Macro

FN + PRT SC = Única Macro Loop
FN + SCR LK = Infinito Macro Loop
FN + PAUSE = Repetir Macro

FN + 1 = Cambiar al Perfil 1
FN + 2 = Cambiar al Perfil 2
FN + 3 = Cambiar al Perfil 3
FN + 4 = Cambiar al Perfil 4

FN + Page Up = Subir Volumen
FN + Page Down = Bajar Volumen

FN + INS = Play/Pausa
FN + HOME = Siguiente pista
FN + DEL = Stop
FN + END = Subir Volumen

FN + Tecla de dirección arriba / abajo:
acelerar / ralentizar los efectos de Iluminación LED

FN + Tecla flecha hacia la Izquierda / Derecha :
Cambiar la dirección del efecto de Iluminación

DE

FN + ESC = Standardprofil

FN + E = alles auf Standardinstellungen zurücksetzen
FN + R = Profile auf Standardinstellungen zurücksetzen

FN + F1 = zufällige Auswahl aus 9 Profilen
FN + F2 (Rot +) = Farbstufen rot (0-9)
FN + F3 (Grün +) = Farbstufen grün (0-9)
FN + F4 (Blau +) = Farbstufen blau (0-9)

FN + F5 = LED Modus
FN + F6 = Beleuchtungseffekt vorne
FN + F7 = Beleuchtungseffekt hinten
FN + F8 = Beleuchtungsdemomodus

FN + F9 = Windows-Sperre / vollständige Tastatursperre
FN + F10 = LED Beleuchtung aufzeichnen
FN + F11 = Macro aufzeichnen
FN + F12 = Macro löschen

FR

FN + ESC = Profil par défaut

FN + E = Remettre tous les réglages par défaut
FN + R = Réinitialiser le profil par défaut

FN + F1 = Sélection rapide / Cycle 9 couleurs et modes
FN + F2 (Rouge+) = Niveaux de couleur rouge (0-9)
FN + F3 (Vert+) = Niveaux de couleur verte (0-9)
FN + F4 (Bleu+) = Niveaux de couleur bleue (0-9)

FN + F5 = Mode d'éclairage LED
FN + F6 = Effet lumineux avant
FN + F7 = Effet lumineux arrière
FN + F8 = Mode lumineux de démonstration

FN + F9 = Verrouillage Windows / Verrouillage du clavier complet
FN + F10 = Enregistrer le rétro-éclairage LED
FN + F11 = Enregistrer la Macro
FN + F12 = Effacer la Macro

FN + PRT SC = einfache Macro-Schleife
FN + SCR LK = unendliche Macro Schleife
FN + PAUSE = Macro wiederholen

FN + 1 = zu Profil 1 wechseln
FN + 2 = zu Profil 2 wechseln
FN + 3 = zu Profil 3 wechseln
FN + 4 = zu Profil 4 wechseln

FN + BILD OBEN = Lautstärke +
FN + BILD UNTEN = Lautstärke -

FN + INS = Abspielen/Pause
FN + HOME = Nächster Titel
FN + DEL = Stop
FN + END = Vorheriger Titel

FN + obere/untere Pfeiltaste:
Schnelligkeit des Lichteffekts erhöhen/verringern

FN + linke/rechte Pfeiltaste:
Licht Effekt Richtungswechsel

FN + PRT SC = Boucle de Macro simple
FN + SCR LK = Macro Loop infinie
FN + PAUSE = Répétition de la Macro

FN + 1 = Basculer vers le Profil 1
FN + 2 = Basculer vers le Profil 2
FN + 3 = Basculer vers le Profil 3
FN + 4 = Basculer vers le Profil 4

FN + Page Up = Augmentation du volume
FN + Page Down = Diminution du volume

FN + INS = Lecture/Pause
FN + HOME = Piste suivante
FN + DEL = Stop
FN + END = Piste précédente

FN + Flèches de direction haut / bas :
Accélérer / ralentir les effets d'éclairage LED

FN + Flèche gauche / Flèche droite :
Changement de direction de l'effet d'éclairage

IT

FN + ESC = Profilo di default

FN + E = Ripristina tutto al default
FN + R = Ripristina profilo al default

FN + F1 = Presa rapida/Ciclo a 9 Colori e modalità
FN + F2 (Rosso +) = Livelli colore Rosso (0-9)
FN + F3 (Verde +) = Livelli colore Verde (0-9)
FN + F4 (Blue +) = Livelli Colore BLue (0-9)

FN + F5 = Modalità illuminazione a LED
FN + F6 = Effetto anteriore illuminazione
FN + F7 = Effetto posteriore illuminazione
FN + F8 = Modalità demo illuminazione

FN + F9 = Blocco finestra / Blocco tastiera completo
FN + F10 = Registra retroilluminazione LED
FN + F11 = Registra Macro
FN + F12 = Cancella Macro

PT

FN + ESC = Perfil Standart

FN + E = Redefine tudo para o defeito
FN + R = Redefine o perfil para o defeito

FN + F1 = Pick Rápido / Ciclo 9 / Cores e Modos
FN + F2 (Vermelho +) = Niveis da Cor Vermelha (0-9)
FN + F3 (Verde+) = Niveis da Cor Verde (0-9)
FN + F4 (Azul +) = Niveis da Cor Azul (0-9)

FN + F5 = Modos de Iluminação LED
FN + F6 = Efeito de Iluminação frontal
FN + F7 = Efeito de Iluminação traseira
FN + F8 = Modo de demonstração de Iluminação

FN + F9 = Bloqueio do Windows / Bloqueio total do teclado
FN + F10 = Grava a retro-iluminação LED
FN + F11 = Grava Macro
FN + F12 = Elimina Macro

FN + PRT SC = Singolo Macro loop
FN + SCR LK = Infinito Macro Loop
FN + PAUSE = Ripeti Macro

FN + 1 = Passare al Profilo 1
FN + 2 = Passare al Profilo 2
FN + 3 = Passare al Profilo 3
FN + 4 = Passare al Profilo 4

FN + Page Up = Volume Su
FN + Page Down = Volume Giù

FN + INS = Play/Pausa
FN + HOME = Traccia Successiva
FN + DEL = Stop
FN + END = Traccia precedente

FN + Tasti freccia verso il basso / verso l'alto:
accelerare / rallentare gli effetti di illuminazione a LED

FN + Tasti Freccia a Sinistra / Freccia a Destra:
Cambiare effetto d'illuminazione

FN + PRT SC = Macro Loop singular
FN + SCR LK = Macro Loop Infinita
FN + PAUSE = Repetição da Macro

FN + 1 = Muda para o perfil 1
FN + 2 = Muda para o perfil 2
FN + 3 = Muda para o perfil 3
FN + 4 = Muda para o perfil 4

FN + Page Up = Aumento do Volume
FN + Page Down = Baixar o Volume

FN + INS = Play/Pausa
FN + HOME = Próxima faixa
FN + DEL = Parar
FN + END = Faixa anterior

FN + tecla da seta para cima/ baixo:
acelera/desacelera os efeitos da iluminação LED

FN + Tecla para a direita/esquerda
Teclas: Muda a direcção dos efeitos luminosos

RU

FN + ESC = профиль по умолчанию

FN + E = сбросить все
FN + R = сброс настроек профиля к настройкам по умолчанию

FN + F1 = Быстрый выбор/Цикл из 9 цветов и режимов
FN + F2 (красный +) = уровни красного цвета (0-9)
FN + F3 (зеленый +) = уровни зеленого цвета (0-9)
FN + F4 (синий +) = уровни синего цвета (0-9)

FN + F5 = Режим светодиодной подсветки
FN + F6 = Эффект передней подсветки
FN + F7 = Эффект задней подсветки
FN + F8 = Режим демонстрации подсветки

FN + F9 = Блокировка клавиши Windows / блокировка всех клавиш
FN + F10 = запись LED подсветки
FN + F11 = запись макроса
FN + F12 = удалить макрос

FN + PRT SC = единственный цикл макроса
FN + SCR LK = бесконечный цикл макроса
FN + PAUSE = повтор макроса

FN + 1 = переключение на профиль 1
FN + 2 = переключение на профиль 2
FN + 3 = переключение на профиль 3
FN + 4 = переключение на профиль 4

FN + Page Up = Увеличение громкости
FN + Page Down = Уменьшение громкости

FN + INS = Воспроизведение/Пауза

FN + HOME = Следующий трек
FN + DEL = Стоп
FN + END = Предыдущий трек

FN + вверх/вниз (клавиши со стрелками):
ускорить/замедлить световые эффекты LED

FN + Клавиши со стрелками влево/вправо:
переключение направления светового эффекта

CHT

FN + ESC = 預設設定檔

FN + E = 全部恢復為預設值
FN + R = 將設定檔恢復為預設值

FN + F1 = 快速選擇/循環切換 9 種顏色及模式
FN + F2 = 紅色色階 (0-9)
FN + F3 = 綠色色階 (0-9)
FN + F4 = 藍色色階 (0-9)

FN + F5 = 循環切換 LED 照明模式
FN + F6 = 前方照明效果
FN + F7 = 後方照明效果
FN + F8 = 照明展示模式

FN + F9 = Windows 鎖定 / 全鍵盤鎖定
FN + F10 = 錄製 LED 背光
FN + F11 = 錄製巨集
FN + F12 = 刪除巨集

FN + PRT SC = 單一循環巨集
FN + SCR LK = 無限巨集循環
FN + PAUSE = 重複巨集

CHS

FN + ESC = 默认配置文件

FN + E = 全部重置为默认值
FN + R = 将配置文件重置为默认值

FN + F1 = 快速挑选/循环 9 种颜色和模式
FN + F2 = 红色水平 (0-9)
FN + F3 = 绿色水平 (0-9)
FN + F4 = 蓝色水平 (0-9)

FN + F5 = 循环 LED 照明模式
FN + F6 = 前面照明效果
FN + F7 = 后面照明效果
FN + F8 = 演示模式照明

FN + F9 = Windows 锁定/完全键盘锁定
FN + F10 = 录制 LED 背光
FN + F11 = 录制宏
FN + F12 = 删除宏

FN + PRT SC = 單次循環巨集
FN + SCR LK = 無限巨集循環
FN + PAUSE = 重複巨集

FN + 1 = 設定檔 1
FN + 2 = 設定檔 2
FN + 3 = 設定檔 3
FN + 4 = 設定檔 4

FN + Page Up = 音量增加
FN + Page Down = 音量降低

FN + INS = 播放/暫停
FN + HOME = 下一首
FN + DEL = 停止
FN + END = 上一首

FN + 方向上 /下：增加/減少 燈光流動速度

FN + 向左 / 向右方向鍵：切換照明效果方向

FN + PRT SC = 單循環宏
FN + SCR LK = 無限宏循環
FN + PAUSE= 重複宏

FN + 1 = 配置文件 1
FN + 2 = 配置文件 2
FN + 3 = 配置文件 3
FN + 4 = 配置文件 4

FN + Page Up = 音量升高
FN + Page Down = 音量降低

FN + INS = 播放/暫停
FN + HOME = 下一个曲目
FN + DEL = 停止
FN + END = 上一个曲目

FN + 方向上 /下：增加/减小 灯光流动速度

FN + 向左/向右箭头键：切换照明效果方向

JP

FN + ESC = 既定のプロファイル

FN + E = すべて初期値に戻す
FN + R = プロファイルを初期値に戻す

FN + F1 = 9 つの色とモードを簡単選択/循環
FN + F2 = 赤の色レベル (0-9)
FN + F3 = 緑の色レベル (0-9)
FN + F4 = 青の色レベル (0-9)

FN + F5 = LED照明モードの循環
FN + F6 = フロントの照明効果
FN + F7 = リアの照明効果
FN + F8 = 照明デモモード

FN + F9 = Windowsロック/フルキーボードロック
FN + F10 = LED/バックライトを記録
FN + F11 = マクロを記録
FN + F12 = マクロを削除

FN + PRT SC = マクロのシングルループ
FN + SCR LK = マクロの無限ループ
FN + PAUSE = マクロの繰り返し

FN + 1 = プロファイル1
FN + 2 = プロファイル2
FN + 3 = プロファイル3
FN + 4 = プロファイル4

FN + Page Up = 音量を上げる
FN + Page Down = 音量を下げる

FN + INS = 再生/一時停止
FN + HOME = 次のトラック
FN + DEL = 停止
FN + END = 前のトラック

FN + 上向き矢印/下向き矢印キー:
LED照明効果の速度を上げる/下げる

FN + 左向き矢印/右向き矢印キー:
照明効果の方向を切り替える

| 部件名称 | 有毒有害物质或元素 | | | | | |
|-----------------|-----------|--------|--------|---------------|------------|--------------|
| | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr (VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| 结构壳体 | X | O | O | O | O | O |
| 开关部件 PCB,USB | X | O | O | O | O | O |
| 线材 | X | O | O | O | O | O |
| 螺丝 | X | O | O | O | O | O |

O：表示该有害物质在该部件所有物质中的含量均符合GB/T17713-2009标准规定的限量要求以下；
X：表示有害物质在该部件全部物质中的含量均不符合GB/T17713-2009标准规定的限量要求。
注：本产品符合欧盟RoHS指令及中国强制性认证标准GB17713-2009标准。有害物质清单中未包含的产品，其有害物质含量符合中国强制性认证标准有害物质清单的要求。

Asia Pacific - Cooler Master Technology Inc.
8F., No. 788-1, Zhongzheng Rd., Zhonghe Dist.,
New Taipei City 23586, Taiwan (R.O.C.)
Tel: +886-2-2225-3517

North America - Cooler Master NA
4820 Schaefer Ave, Chino CA, 91710, USA
Tel: +1-888-624-5099

Europe - Cooler Master Europe B.V.
Lodewijkstraat 1b, 5652AC Eindhoven,
The Netherlands
Tel: +31-4040-702-0900

China - Cooler Master China
Room 2062, Floor 6, No. 421, Weiqing Rd.,
Jinshan District, Shanghai City, China
Tel: +86-21-51872177

© 2018 Cooler Master Technology Inc. All Rights Reserved.
All trademarks are registered to their respective owners.
Ver 1.0: 2018/03

